If the pattern has a double line around it, the seam allowances are included.

Note: By default, seam allowances are NOT included (single line) and will need to be added when laying out and cutting details.

Seam Allowance: 1 cm on all seams; hem guidelines are printed on pattern.

Important! Please print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm) to see how much fabric you will need.

Don't forget to take into account pieces to be duplicated or cut on a fold. When sewing the garment, pay attention to notches. They must match up with corresponding pieces.

2090 Short Coat with High Stand Collar

Recommendations on fabric: natural/mixed fabric suitable for coats.

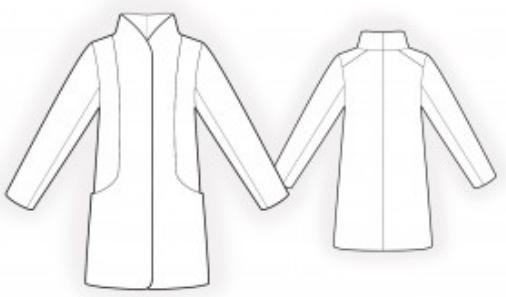

You will also need: lining; fusible interfacing; 4 buttons; shoulder pads; sleeve heads.

CUTTING:

The word, “beam” used on some patterns means “straight of grain”. Some pieces will be cut on the fold, this is noted on the pattern piece. Mark all notches and other design features such as darts, pleats etc. from the pattern onto your fabric.

Seam allowances: all seams 1 cm. Seam allowance for hem of garment and hem of sleeve – 3.5 cm.

<u>Main fabric:</u>
1. Back – cut 2
2. Back yoke – cut 2
3. Center front – cut 2
4. Side front – cut 2
5. Upper sleeve – cut 2
6. Lower sleeve – cut 2

7. Center front facing – cut 2
8. Back neck facing – cut 1

Fusible interfacing:
1. Center front – cut 2
2. Center front facing – cut 2
3. Back neck facing – cut 1
4. Lining of hidden button panel – cut 1

Lining:
1. Back lining – cut 2
2. Front lining – cut 2
3. Upper sleeve – cut 2
4. Lower sleeve – cut 2
5. Pocket bag – cut 2
6. Lining of hidden button panel – cut 2

INSTRUCTIONS:

1. Apply fusible interfacing.

2. Sew the center back seam; press the seam open. Sew the yoke to the back; press the seam allowances toward the yoke.

3. Pin the pocket bag to the front, right sides together, and sew the pocket opening. Fold the pocket bag to the wrong side and press.

4. Pin the front at the front side and sew the princess seams and the edges of the pocket bags with one continuous seam.

5. Sew the side and shoulder seams; press the seams open. Sew the center collar seam; press the seam open. Sew the one-piece collar into the neckline, clipping into the seam allowance near the corner. Clip the seam allowances and press them open.

6. Mark the closure slit with three lines on the right side of the right buttonstand (center front facing). The first line should run parallel to the vertical edge of the closure and be positioned 1.5 cm from the finished edge; the second and third lines mark the length of the closure. Pin the lining (with fusible interfacing applied) to the center front facing, right sides together, aligning the edge of the lining with the marked line. Stitch 0.5 cm from the marked line along the closure slit up to the lines that mark the closure length. Pin the second closure lining, aligning its edge with the

stitched line, and stitch 0.5 cm from the edge. Check that the stitch lines are parallel on the wrong side. Cut the slit. Clip into the corners, stopping 1.5 cm from the ends of the closure. Turn the linings to the wrong side through the opening to form a slit frame equal in width to the distance between the stitch lines. Sew a fixing stitch in the ditch of the lining seam. Press the second lining toward the inner edge of the center front facing and sew a fixing stitch 0.1 cm from the seam. Mark and make buttonholes on the center front facing and the interfaced lining. Straighten the ends of the closure and secure them from the wrong side with a double stitch at the base of the corners. Sew the edges of the lining. Make short fastening stitches between each pair of buttonholes; the length of the stitch should equal the width of the frame. Press the center front facing.

7. Sew the side seams of the center front facings and back neckline facings; press the seams open. Sew the center collar seam; press the seam open. Sew the one-piece collar into the neckline, clipping into the seam allowance near the corner. Clip the seam allowances and press them open.

8. Pin the center front facings to the shell, right sides together, and sew the center front edges, collar edge, and lower front corners. Clip curves and trim corners; turn the pieces right side out. Sew a decorative topstitch along the front edge and collar at 0.5–0.7 cm.

9. Sew the elbow seam on the sleeve; press the seam open. Press the hem of the sleeve. Sew the front seam on the sleeve; press the seam open. Sew the sleeves into the armholes, matching notches. Sew in the shoulder pads and sleeve heads.

10. Sew the seams of the lining and sew in the sleeves, leaving a technical opening in the right front sleeve seam. Press the seam allowances of the lining.

11. Sew the lining to the buttonstands and facing; press the seam. Turn the garment right side out, straighten the seams.

12. Mark and press the hem allowance to the wrong side. Sew the lining to the lower edge. Turn the garment right side out through the opening in the sleeve. Sew the lining to the sleeve hem. Sew the opening closed.

13. Sew the buttons onto the left front.

Congratulations, your coat is ready! :)