

If the pattern has a double line around it, the seam allowances are included.

**Note:** By default, seam allowances are NOT included (single line) and will need to be added when laying out and cutting details.

Seam Allowance: 1 cm on all seams; hem guidelines are printed on pattern.

**Important!** Please print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm) to see how much fabric you will need.


Don't forget to take into account pieces to be duplicated or cut on a fold. When sewing the garment, pay attention to notches. They must match up with corresponding pieces.

## 2231 Knit jacket without closure

Recommendations on fabric:  
natural/mixed close-knit fabrics.  
You will also need: knit fusible  
interfacing.

### CUTTING:

The word, “beam” used on some patterns means “straight of grain”.  
Some pieces will be cut on the fold, this is noted on the pattern piece. Mark all notches and other design features such as darts, pleats etc. from the pattern onto your fabric.

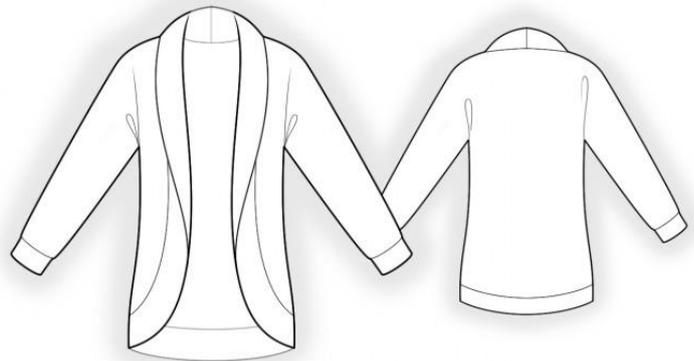

### Main fabric:

1. Back – cut 1 on fold
2. Lower back – cut 2
3. Side front – cut 2
4. Center front – cut 2
5. Cuff – cut 2

Fusible interfacing: center front, cuff.

### INSTRUCTIONS:

1. Apply fusible interfacing. Cut a tape from fusible interfacing and apply along edge of

back neckline.

2. Sew princess seam on front. Press towards center.

3. Sew collar seam. Press seam apart. Sew and press apart shoulder and side seams of jacket. Clip into seam allowance of shoulder seam on front and sew collar into back neckline. Press seam apart.

4. Sew and press apart shoulder seams of back neckline facing and button stand. Sew collar seam on center front facing. Press seam apart. Clip into seam allowance on corner of button stand and sew collar into back neckline. Press seam apart. Serge outer edges.

5. Pin button stand to jacket wrong sides together, pin together, matching outer edges. Sew bias tape to the center front facing, collar and lower edge of jacket (pin bias tape to edge from the right side and sew, fold bias tape onto wrong side and topstitch onto garment along fold line).

6. Sew the elbow seam of the sleeve and press it apart. Serge and press towards upper piece. Sew front edge. Serge and press towards upper sleeve part. Sew bias tape to lower edge (pin bias tape to edge from the right side and sew, fold bias tape onto wrong side and topstitch onto garment along fold line).

7. Sew sleeves into armholes matching notches, adjusting ease along upper side of sleeve cap. Sew shoulder pads.

8. On right front make buttonholes, sew on buttons on left front.

Congratulations, your jacket is ready! :)