

If the pattern has a double line around it, the seam allowances are included.

Note: By default, seam allowances are NOT included (single line) and will need to be added when laying out and cutting details.

Seam Allowance: 1 cm on all seams; hem guidelines are printed on pattern.

Important! Please print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm) to see how much fabric you will need.

Don't forget to take into account pieces to be duplicated or cut on a fold. When sewing the garment, pay attention to notches. They must match up with corresponding pieces.


2312 Super-Loose Overalls

Recommendations on fabric: natural/mixed jeans fabrics.

You will also need: cotton fabric for finishing armhole; 1 zipper 12 cm; 2 buttons.

CUTTING:

The word, "beam" used on some patterns means "straight of grain". Some pieces will be cut on the fold, this is noted on the pattern piece. Mark all notches and other design features such as darts, pleats etc. from the pattern onto your fabric.

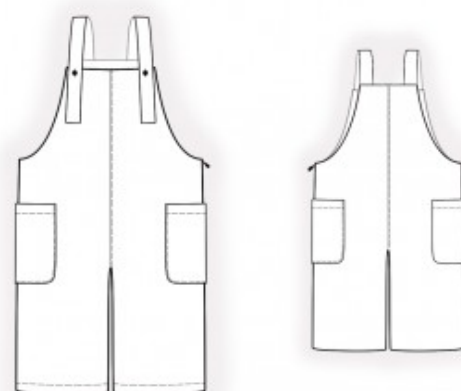

Seam allowances: Seam allowance for hem of garment – 3 cm, seam allowance along upper edge of pocket – 2 cm; seam allowance along the upper edge of the front half and back half – 1.5 cm; other seams – 1 cm.

Main fabric:

1. Front half – cut 2
2. Back half – cut 2
3. Strap – cut 2
4. Pocket – cut 2

INSTRUCTIONS:

1. Serge the seam allowances of the left side seam separately. Sew the left side seam from the zipper notch to the hem and press the seam allowances open. Insert the zipper. Sew the right side seam, press the seam allowances toward the back, and serge.
2. Serge the seam allowance along the upper edge of the pocket, press it to the wrong side, and topstitch. Serge the side and lower edges of the pocket, press them to the wrong side, pin the pocket to the garment according to the markings, and topstitch.
3. Sew the inseams. Press the seam allowances toward the back and serge.
4. Place the left and right halves right sides together and sew the center back and center front seams. Press the seam allowances toward the left and serge. Sew a decorative topstitch 0.5 cm from the seam.
5. Cut a bias strip from cotton fabric, 4 cm wide and the length of the armhole plus 4 cm. Fold the bias strip in half lengthwise, right side out, and press. Pin the bias strip to the armhole edge on the right side and stitch. Clip into the seam allowances. Fold the bias strip to the wrong side and topstitch it to the garment along the seam. Press.
6. Serge the upper edges of the front and back pieces, press them to the wrong side, and topstitch.
7. Fold the straps in half lengthwise, right sides together, and stitch along the long edge and one short edge. Turn right side out, shape, and press. Sew a decorative topstitch 0.5 cm from the edge. Serge the remaining short edge.
8. Place the straps under the upper edge of the back pieces, baste them in place, and topstitch. Sew buttons onto the upper edge of the front pieces. Adjust the strap length and make buttonholes in the straps.
9. Serge the garment hem, press it to the wrong side, and topstitch.

Congratulations – your overalls are finished! :)