

If the pattern has a double line around it, the seam allowances are included.

Note: By default, seam allowances are NOT included (single line) and will need to be added when laying out and cutting details.

Seam Allowance: 1 cm on all seams; hem guidelines are printed on pattern.

Important! Please print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm) to see how much fabric you will need.


Don't forget to take into account pieces to be duplicated or cut on a fold. When sewing the garment, pay attention to notches. They must match up with corresponding pieces.

2366 T-Shirt Dress

Recommendations on fabric:
natural/mixed knit fabric of medium stretchiness.

CUTTING:

The word, "beam" used on some patterns means "straight of grain". Some pieces will be cut on the fold, this is noted on the pattern piece. Mark all notches and other design features such as darts, pleats etc. from the pattern onto your fabric.

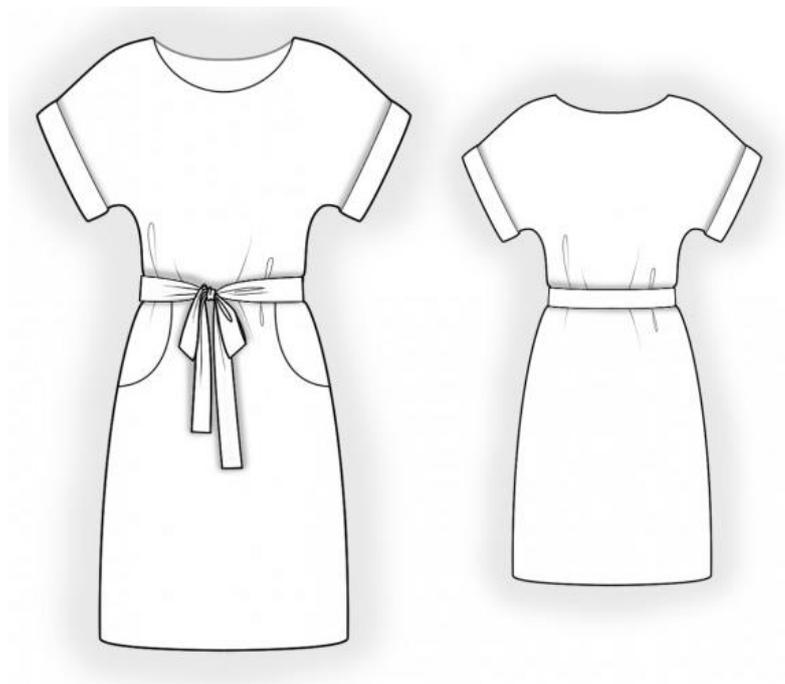

Main fabric:

1. Upper back - cut 1 on fold
2. Lower back - cut 1 on fold
3. Upper front - cut 1 on fold
4. Lower front - cut 1 on fold
5. Front side – cut 2
6. Pocket bag – cut 2
7. Cuff – cut 2
8. Belt – cut 1 on fold

INSTRUCTIONS:

1. Sew upper back to lower back, press towards top and serge.
2. Pin pocket bag onto lower front right sides together and sew pocket opening. Clip seam allowances, fold pocket bag onto wrong side, press. Pin lower front at front side and sew edges of pocket bags, serge. Baste pieces together along the side edge and upper edge.
3. Sew upper front to lower front, press towards top and serge.
4. Sew right shoulder seam, press seams towards back and serge.
5. Cut or use ready-made bias tape, its width should equal 4 cm and length should equal the length of neckline + 5 cm. Fold bias tape in half lengthwise right side out and press. Pin bias tape to neckline from the right side and sew. Clip into seam allowances. Fold bias tape onto wrong side and topstitch onto main piece along seam. Press seam.
6. Sew left shoulder seam, press seams towards back and serge.
7. Sew side seams, press seams towards back and serge.
8. Sew cuff into a ring, press seam apart. Fold cuff in half lengthwise right side out. Sew cuff to wrong side of sleeve, serge. Fold cuff to right side.
9. Serge lower edge of garment, press onto wrong side and topstitch.
10. Fold belt in half lengthwise right sides together and sew, and leave an opening unsewn along the lower edge, so that you can turn out the piece later. Turn belt right side out, straighten and press. Topstitch belt around all edges at 0.1 cm from edge.

Congratulations, your dress is ready! :)