If the pattern has a double line around it, the seam allowances are included.


Note: By default, seam allowances are NOT included (single line) and will need to be added when laying out and cutting details.

Seam Allowance: 1 cm on all seams; hem guidelines are printed on pattern.

Important! Please print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm) to see how much fabric you will need.

Don't forget to take into account pieces to be duplicated or cut on a fold. When sewing the garment, pay attention to notches. They must match up with corresponding pieces.

2456 Dress with Asymmetrical Gathers

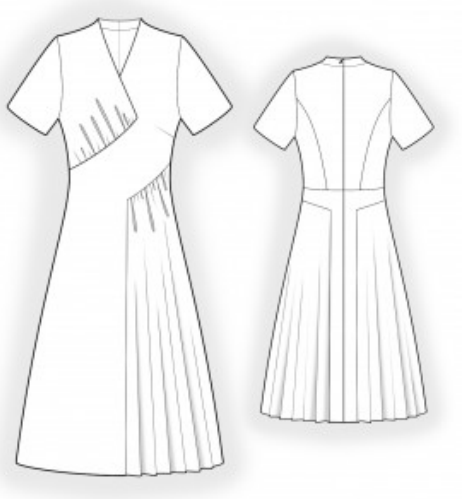

Recommendations on fabric: natural/mixed fabric suitable for dresses.

You will also need: dress zipper.

CUTTING:

The word, “beam” used on some patterns means “straight of grain”. Some pieces will be cut on the fold, this is noted on the pattern piece. Mark all notches and other design features such as darts, pleats etc. from the pattern onto your fabric.

Seam allowances: all seams – 1 cm. Seam allowance for hem of dress and hem of sleeve – 1.5 cm.

Main fabric:
1. Upper center back – cut 2
2. Upper side back – cut 2
3. Lower center back – cut 2
4. Lower side back – cut 2
5. Upper right front – cut 1
6. Middle front – cut 1
7. Left lower front – cut 1
8. Sleeve – cut 2

INSTRUCTIONS:

1. Sew the princess seams of the upper back. Press the seam allowances toward the center and serge. Sew the princess seams of the lower back by attaching the side back pieces to the center back, clipping into the seam allowance at the corner of the center back piece. Press the seam allowances toward the center and serge. Sew the upper back to the lower back. Press the seam allowances upward and serge.

2. Sew the dart on the middle front and press the dart excess upward.

3. Sew a gathering stitch along the lower edge of the upper right front and gather the fabric to the required width. Serge the outer edge of the integrated center front facing and press it to the wrong side.

4. Serge the outer edge of the integrated center front facing on the middle front and press it to the wrong side. Sew the upper front to the middle front, clipping into the seam allowance at the corner. Serge the seam allowances and press.

5. Sew a gathering stitch along the upper edge of the lower left front and gather the fabric to the required width. Sew the lower front to the middle front, clipping into the seam allowance at the corner. Serge the seam allowances and press.

6. Clip into the seam allowance at the corner of the front shoulder seam. Sew the shoulder seams. Press the seam allowances toward the back and serge. Sew the outer stand collar to the back neckline and press the seam allowances toward the collar. Baste the seam allowance of the inner stand collar to the seam and stitch in the ditch to secure it.

7. Sew the side seams. Press the seam allowances toward the back and serge.

8. Serge the center back edges of each piece separately. Sew the center back seam from the zipper notch to the lower edge and press the seam allowances open. Insert the zipper.

9. Sew the sleeve seams. Press the seam allowances toward the back and serge. Set the sleeves into the armholes. Serge the seam allowances and press.

10. Serge the lower edge of the dress and the sleeve hems. Press the hem allowances to the wrong side and topstitch.

Congratulations – your dress are finished! :)