

If the pattern has a double line around it, the seam allowances are included.

Note: By default, seam allowances are NOT included (single line) and will need to be added when laying out and cutting details.

Seam Allowance: 1 cm on all seams; hem guidelines are printed on pattern.

Important! Please print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm) to see how much fabric you will need.

Don't forget to take into account pieces to be duplicated or cut on a fold. When sewing the garment, pay attention to notches. They must match up with corresponding pieces.

4636 Blouse with raglan sleeves

Recommendations on fabric:
lightweight natural or mixed
suiting fabric.


You will also need: fusible
interfacing, invisible zipper

CUTTING:

The word, "beam" used on some patterns means "straight of grain". Some pieces will be cut on the fold, this is noted on the pattern piece. Mark all notches and other design features such as darts, pleats etc. from the pattern onto your fabric.

Main fabric:

1. Back sleeve – cut 2
2. Front sleeve - cut 2
3. Back - cut 2
4. Front - cut 1
5. Back neck facing - cut 2
6. Front neck facing - cut 1

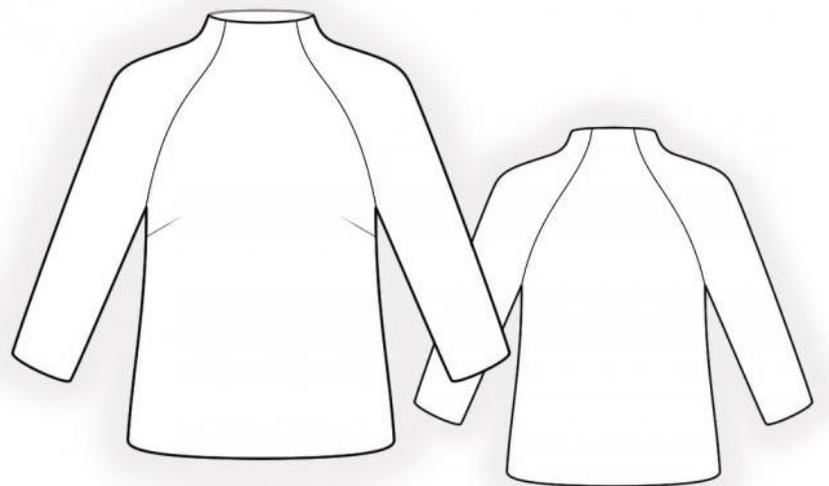

Fusible interfacing:

1. Back neck facing - cut 2
2. Front neck facing - cut 1

INSTRUCTIONS:

1. Apply fusible interfacing to facings.
2. Sew darts on front. Press bulk upwards.
3. Sew separately center back edges. Sew center back seam from zipper mark down to hem. Press seam open pressing the slit for zipper. Install zipper.
4. Sew back sleeves to back, serge and press seam towards sleeve. Sew front sleeves to front, serge and press seam towards sleeve.
5. Sew upper sleeve seam. Serge and press seam towards back. Sew side and lower sleeve seam with one continuous stitch. Serge and press seam towards back.
6. Sew shoulder seams of facings and press open. Serge outer edge. Pin facing to blouse right sides together and sew neckline. Clip seam on curves. Turn facing to inside, straighten and press. Tack facing to shoulder seams and zipper tape.
7. Turn hems under at 1 cm and press. Then turn again at 2 cm and topstitch.

Congratulations, your blouse is ready! :)