If the pattern has a double line around it, the seam allowances are included.

Note: By default, seam allowances are NOT included (single line) and will need to be added when laying out and cutting details.


Seam Allowance: 1 cm on all seams; hem guidelines are printed on pattern.

Important! Please print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm) to see how much fabric you will need.

Don't forget to take into account pieces to be duplicated or cut on a fold. When sewing the garment, pay attention to notches. They must match up with corresponding pieces.

4842 Flared Dress with Yoke

Recommendations on fabric: thin natural/mixed fabric suitable for dresses.

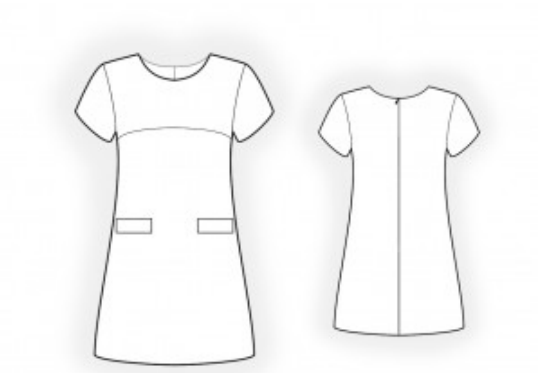

You will also need: dress zipper; fusible interfacing.

CUTTING:

The word, “beam” used on some patterns means “straight of grain”. Some pieces will be cut on the fold, this is noted on the pattern piece. Mark all notches and other design features such as darts, pleats etc. from the pattern onto your fabric.

Seam allowances: all seams – 1 cm. Seam allowance along hem – 3 cm, seam allowance of sleeve hem – 2 cm.

Main fabric:
1. Back – cut 2
2. Front – cut 1 on fold
3. Yoke – cut 1 on fold
4. Back neck facing – cut 2
5. Front neck facing – cut 1
6. Sleeve – cut 2
7. Flap – cut 2

Fusible interfacing:
1. Back neck facing – cut 2
2. Front neck facing – cut 1
3. Flap – cut 2

INSTRUCTIONS:

1. Apply fusible interfacing to the facings and flaps.

2. Serge the center back edges separately. Sew the center back seam from the zipper notch to the lower edge, leaving the zipper opening unstitched. Press the seam allowances open and insert the zipper.

3. Fold each flap in half, right sides together, and sew along the two short edges. Trim the seam allowances and corners, then turn the flap right side out. Shape the edges and press. Serge the upper edge. Position the flap on the front according to the markings, with the flap folded upward, and topstitch it in place. Fold the flap downward and topstitch again to secure it.

4. Sew the yoke to the front. Serge the seam allowances and press them upward.

5. Sew the side and shoulder seams. Press the seam allowances toward the back and serge.

6. Sew the shoulder seams of the neckline facings and press the seam allowances open. Serge the outer edge of the facing. Pin the facing to the garment, right sides together, and sew along the neckline. Turn the facing to the wrong side, shape the neckline, and press. Secure the facing to the garment with slip stitches along the shoulder seams and center back seam.

7. Sew the sleeve seams. Serge the seam allowances and press. Set the sleeves into the armholes, matching the notches. Serge the seam allowances and press.

8. Serge the lower edges of the dress and sleeves. Press the hem allowances to the wrong side and topstitch.

Congratulations – your dress are finished! :)