

If the pattern has a double line around it, the seam allowances are included.

Note: By default, seam allowances are NOT included (single line) and will need to be added when laying out and cutting details.

Seam Allowance: 1 cm on all seams; hem guidelines are printed on pattern.

Important! Please print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm) to see how much fabric you will need.

Don't forget to take into account pieces to be duplicated or cut on a fold. When sewing the garment, pay attention to notches. They must match up with corresponding pieces.

5102 Long coat with hidden pockets

Recommendations on fabric: fabric suitable for coats


You will also need: lining; fusible interfacing; 7 big buttons; 4 small buttons; shoulder pads

CUTTING:

The word, "beam" used on some patterns means "straight of grain". Some pieces will be cut on the fold, this is noted on the pattern piece. Mark all notches and other design features such as darts, pleats etc. from the pattern onto your fabric.

Main fabric:

1. Upper back part - 1 folded detail
2. Lower back part - 1 folded detail
3. Side back part - 2 details
4. Central front part - 2 details
5. Top part of front part's side-body - 2 details
6. Lower part of front part's side-body - 2 details
7. Buttonstand - 2 details
8. Collar - 2 details
9. Stand-up part of collar - 2 details

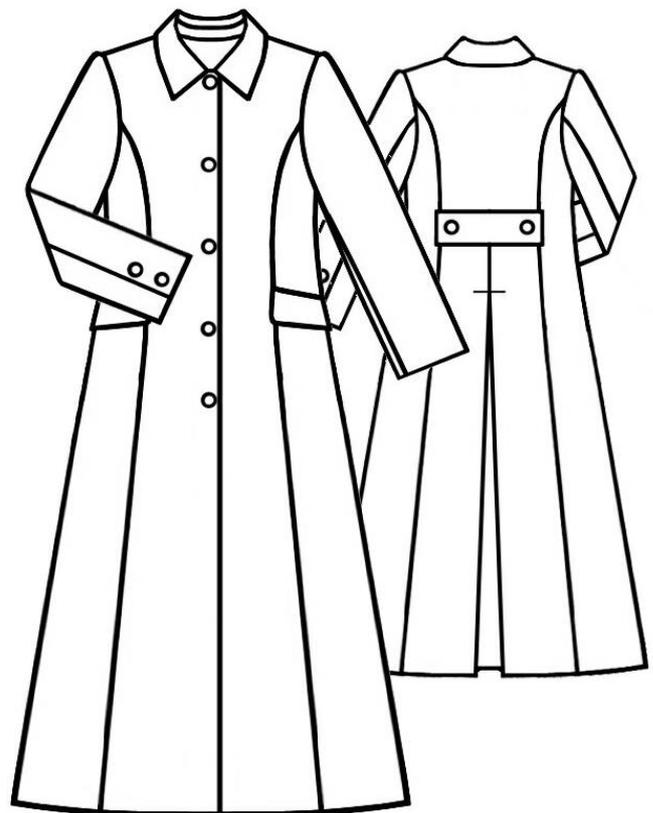

10. Upper sleeve part - 2 details
11. Lower sleeve part - 2 details
12. Half belt - 2 details
13. Flap of pocket - 4 details
14. Pocket underlay piece- 2 details

Lining:

1. Back part - 1 folded detail
2. Front part - 2 details
3. Upper sleeve part - 2 details
4. Lower sleeve part - 2 details
5. Pocket bag - 2 details

Fusible interfacing:

Apply fusible interfacing to buttonstands, one detail of half belt, top parts of flaps, one detail of collar and stand-up part of collar. Additionally apply fusible interfacing to hem allowances.

INSTRUCTIONS:

1. Apply fusing to buttonstands, one detail of half belt, top parts of flaps, one detail of collar and stand-up part of collar (Fusing is applied to the wrong side of details with very hot iron).
2. Make and tack a pleat on lower back part, leveling notches. Stitch it, putting the stitch on top allowance a bit higher than marked line of the stitch.
3. Make the back part: sew together upper back part and lower back part, and princess seams. Stitch the pleat according to markers.
4. Overstitch the half belt on three sides, turn out and press the folds. Turn inside the open edge and put the stitch on half belt edges at 0.5 cm. Tack half belt detail to back part with buttons, closing the upper back part and lower back part connecting seam.
5. **POCKETS:** stitch up flap details on side and lower edges. Stitch the edges into the edge. Turn inside seam allowances of one of long sides of underlay piece and topstitch the underlay piece onto pocket bag. Align open edges of flaps with lower edge of top part of front part's side-body, putting the flap onto right side of top part of front part's side-body; put pocket bag with underlay piece onto the flap and tack all this. Stitch the flap and pocket bag and turn downwards. Press seam allowance on top edge of lower part of front part's side-body onto wrong side. Tack the pocket opening (top part of front part's side-body with lower part of side-body) with X-stitches. Fold the pocket bag along fold-line,

turn inside open edge and topstitch onto seam allowance of top edge of lower part of front part's side body.

6. Tack pocket bags edges of lower part of front part's side-body. Sew princess seams on front parts.

7. Sew shoulder and side seams.

8. Sew fused stand-up part of collar to the fused collar, unfused part – to unfused collar, press seam allowances apart.

9. Sew details from lining. Sew shoulder seams of buttonstands and of back part lining, overstitch buttonstands with lining on inner edges. Sew fused detail of stand-up part of collar into the neckline, press seam allowances apart; stitch unfused detail to buttonstands with lining.

10. Put top collar that is combined with buttonstands and with lining onto main garment right sides together and overstitch buttonstand and collar; turn out and press; undersew edge of stand-up part of top collar onto neckline. From the right sides of the garment straighten front band and collar, tack.

11. Apply fusing to seam allowance on hem of sleeve and the vent. Sew sleeve seams, leave vents open on elbow seams. Slash seam allowances above the vent notch of lower parts of sleeves. Press seam allowances apart above the vent. Overstitch sleeves with turnup. Press edges of vents on top parts of sleeves onto wrong side. Pin the vents, from inside topstitch edges of vents onto each other.

12. Slightly gather the rounded part of sleeve between notches and tie the thread up to corresponding section of the garment armhole. Damp the fabric and press the gathering with the end of the very hot iron. Pin the sleeve to the garment, leveling control notches, and sew, making the seam from the side of sleeve.

13. Sew shoulder pads.

14. Undersew hem of the coat.

15. Stitch lining to lower edges of sleeves. Undersew lining.

16. Serge buttonholes on right front part, sew buttons on left front part
Congratulations, your coat is ready! :)