

If the pattern has a double line around it, the seam allowances are included.

Note: By default, seam allowances are NOT included (single line) and will need to be added when laying out and cutting details.

Seam Allowance: 1 cm on all seams; hem guidelines are printed on pattern.

Important! Please print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm) to see how much fabric you will need.

Don't forget to take into account pieces to be duplicated or cut on a fold. When sewing the garment, pay attention to notches. They must match up with corresponding pieces.

5429 Women's trousers with drawstring

Recommendations on fabric: denim.

You will also need: iron-on interfacing, 1 button, decorative cord, eyelets and cotton lining.


CUTTING:

The word, "beam" used on some patterns means "straight of grain". Some pieces will be cut on the fold, this is noted on the pattern piece. Mark all notches and other design features such as darts, pleats etc. from the pattern onto your fabric.

Seam allowances: all seams 1 cm, 2 cm for the hem.

Main fabric:

1. Side front – 2 pieces
2. Centre front – 2 pieces
3. Back facing – 4 pieces
4. Upper front facing – 2 pieces
5. Upper side front – 2 pieces
6. Zip guard – 1 piece
7. Back – 2 pieces
8. Carrier – 1 piece
9. Lower front facing – 2 pieces

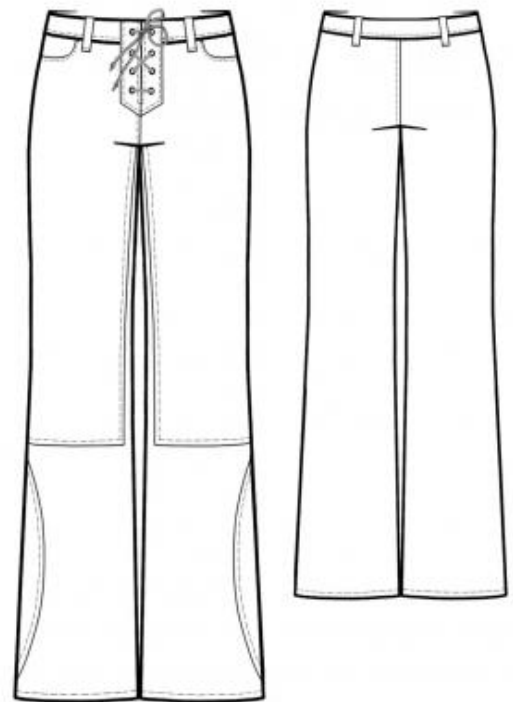

10. Fly facing – 2 pieces

Lining:

1. Pocket – 2 pieces
2. Pocket facing – 2 pieces

Interfacing: upper front facing, back facing, zip guard and fly facing.

INSTRUCTIONS:

1. Apply interfacing to the wrong side of the upper front facing, back facing, zip guard, and fly facing.
2. Sew the front inset to the side front piece. Neaten the seam and press the seam allowances toward the side front. Topstitch 0.5 cm from the seam line.
3. Sew the center front piece to the side front piece. Neaten the seam and press the seam allowances toward the side front. Topstitch 0.5 cm from the seam line.
4. Neaten the outer edge of the upper side front piece and topstitch it to the pocket. With right sides together, sew the pocket facing to the pocket opening. Topstitch the pocket opening 0.5 cm below the fold. Sew the upper side front piece to the pocket facing along the inner edges. Neaten this seam. Sew the pocket to the front along the side and waist edges.
5. Sew the lower front facing to the front. Sew the lower back facing to the back. Neaten and press the seam allowances toward the facings.
6. Neaten the side edges, inseams, and crotch edges of the garment.
7. Sew the center front seam, stopping 2 cm before the inseam edges.
8. Fold the zip guard right sides together and stitch along the short edge. Turn it right side out and press. Neaten the long edge of the zip guard. Place the zip guard under the left front piece, 2 cm from the front opening edge, and tack it in place (the upper edge of the zip guard should align with the seam line of the upper facing). Topstitch on the right side through the garment and the zip guard.
9. Sew the center edges of the fly facing up to the notch and press the seam allowances open. Press the outer edges of the facing under. Sew the fly facing to the front opening. Turn the facing to the right side of the garment and press.
10. Fold the carrier piece in half lengthwise, right sides together, and stitch 0.5–0.7 cm from the fold. Turn right side out and press.
11. Sew the inseams and press them open. Sew the back crotch seam and continue sewing 2 cm of the center front seam.
12. Sew the side seams and press them open.
13. Sew the upper facings together at the side seams and press the seam allowances open. Press the lower edge of the upper facing to the wrong side. Pin the under facing to the garment, right side to wrong side, and stitch around the top edge,

placing the fly facing under the front facing. Topstitch the seam allowances to the under facing. Press.

14. Cut the carriers. Clip the seam allowances at the fly facing corners and turn the facings right side out. Topstitch the upper facing in the previously sewn seam, catching the carriers in the seam. Topstitch the carriers to the upper edge of the facing.
15. Topstitch the fly facing to the front.
16. Neaten the trouser hems, press them to the wrong side, and topstitch.
17. Attach the eyelets and thread the cord through them.

Congratulations – your trousers are finished! :)